

# Echogel

## Ultrasonic Couplant

Echogel 20® is an economical, basic-use couplant in medium-thick gel viscosity for ultrasonic inspections, like flaw detection/sizing and thickness gauging, where salt cake or metal corrosion salts are present. It provides good corrosion inhibition and resists viscosity breakdown on salt-caked boilers and other corroded materials.



### FEATURES

- Enhanced surface wetting to quickly cover oily or dirty surfaces
- Maintains viscosity on corrosion or salt cake
- Good corrosion inhibition
- Silicone free
- Hydrogen embrittlement testing

### APPLICATIONS

**Defect location:** subsurface

**Ideal for:**

- Flaw detection
- Flaw sizing
- Thickness gauging
- Power generating boilers
- Corroded parts
- When corrosion, salt, or salt cake is present
- Large volume flaw inspections
- Small diameter pipe
- Weld inspection
- High strength steel
- OCTG
- Tubular goods
- Pipes, pipe components, connections and couplings

### SPECIFICATION COMPLIANCE

- API
- ASTM F519
- ASME
- AWS

### PROPERTIES

<b>Appearance</b>	Transparent gel
<b>Color</b>	Light green
<b>Comparative Viscosity*</b>	5.5
<b>Silicone</b>	No
<b>Glycerin</b>	No
<b>Propylene Glycol</b>	Yes
<b>Halogens</b>	< 50 ppm
<b>Sulfur</b>	< 50 ppm
<b>Water Soluble</b>	Yes

\* Subjective measure, 0–10 scale where 0 = water, 5 = medium gel, 10 = very thick paste

## USE RECOMMENDATIONS

<b>NDT Method</b>	Ultrasonic Testing
<b>Required Equipment</b>	UT equipment, transducer
<b>Usage Temperature<sup>†</sup></b>	27 to 140°F / -3 to 60°C
<b>Storage Temperature</b>	50 to 86°F / 10 to 30°C
<b>Compatibility</b>	Most composites and metals

<sup>†</sup> Couplant integrity and acoustic performance may decline beyond these temperature limits.

## INSTRUCTIONS FOR USE

Apply a small amount of couplant to the transducer or inspection area before measurement.

## REMOVAL

Remove couplant immediately after inspection before the couplant dries with water rinse or a combination of water rinse and brushing. A film may form if the couplant is allowed to dry before removal. Remove film by pressure washing, wire brushing or immersing the part in water until the couplant rehydrates and can be washed or brushed off.

## STORAGE

Store couplant in the original container. Do not freeze. Store out of direct sunlight. Keep container closed when not in use. Never put unused couplant back into the original storage container. If pumps or valves are used to dispense bulk couplant, wash them thoroughly between drums to avoid contaminating new product. Refer to Safety Data Sheet for additional storage instructions.

## PACKAGING

### Echogel 20

1 gal / 3.78 L cubitainer	48-901
5 gal / 18.9 L cubitainer	48-905
55 gal / 208 L drum	48-955

## HEALTH AND SAFETY

Review all relevant health and safety information before using this product. For complete health and safety information, refer to the product Safety Data Sheet, which is available at [www.magnaflux.com](http://www.magnaflux.com).