DARACLEAN® 235 Technical Manual



DISTRIBUÉ PAR / DISTRIBUTED BY:



QUEBEC

164, St-Jean-Baptiste Mercier, QC J6R 2C2 T: (450) 691-9090 **ONTARIO**

275 Sheldon Drive, Unit 3 Cambridge, ON N1T 1A3 T: (519) 894-9069

www.qnde.ca

Description:

SAFE AND EFFECTIVE

DARACLEAN[®] 235 is a low-foaming, all-purpose neutral cleaning solution. Formulated with a blend of surfactants, emulsifiers, and corrosion inhibitors, DARACLEAN[®] 235 is an excellent general cleaner for use on a broad spectrum of soils. Designed to be used with immersion, spray, and ultrasonic applications, it is safe to use with most metals and is non-aggressive towards aluminum, brass, copper, titanium, and zinc alloys.

AEROSPACE QUALIFIED


DARACLEAN[®] 235 has been tested and certified to meet and exceed most Aerospace industry specifications for aqueous and alkaline cleaners. Certifications include AMS, ARP, Boeing, and Douglas. In addition, DARACLEAN[®] 235 has been certified to SCAQMD Clean Air regulations. DARACLEAN[®] 235 has been tested by outside laboratories and complies with ASTM F-483, F-484, F-485, F-502, F-945, and F-1110.

SOIL REJECTING


DARACLEAN[®] 235 has excellent soil-rejecting qualities. After soils are lifted from part surfaces, they are suspended in the cleaner for a short time. Solid particulate soils will slowly settle out of solution. Over time, oil and grease droplets will coalesce and float on the surface of the solution. Removal of particulate and oils can easily be accomplished using filters or skimmers as necessary. This action extends the useful life of DARACLEAN[®] 235 much further than emulsion-type cleaning solutions.

Formulation:

NFPA Rating

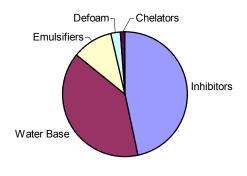

DARACLEAN® 235 Concentrate

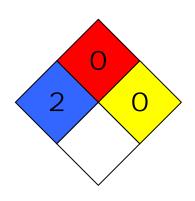


pH Level

\rightarrow	7-9	Neutral
	9-11	Alkaline
	11-13 H	igh Alkaline
	13-14	Caustic

Higher pH cleaners are more aggressive and will clean tougher soils, but high pH levels can corrode or etch soft metal surfaces.

Foam Level



High foam levels will penetrate cracks and holes better, but foam cannot be tolerated in spray applications.

Silicates




Silicates prevent corrosion of metal surfaces, but can form mineral films at high temperatures.

Phosphates



Phosphates provide excellent cleaning action, but are subject to environmental regulations.

Hard Water Tolerance



Hard water can suppress cleaning actions - some cleaners are formulated to counteract hard water effects.

Aerospace Compliant



See list for specification compliance

SARA Reportables



Typical Properties:

	100% Concentrate	10% in DI Water	0.25% in DI Water
Appearance	Amber hazy liquid	Di Water	Di Water
Odor	Bland		
Free Alkaline Equivalent (to pH 8.3)	N/A		
Total Alkaline Equivalent (to pH 4.0)	0.38 - 0.48		
Cloud Point, °F (°C)		123 (51)	
pH	7.4 – 8.0	7.0 – 7.8	
Conductivity, mS	9.1		
Refractive Index, °Brix	14.5 – 16.5		
Specific Gravity	1.02		
Density, Lb/US Gal	8.5		
Surface Tension, dynes/cm		31	
Vapor Pressure, mmHg @ 20°C	18		
VOC, EPA Method 24	41.6 g/L 0.35 Lb/US Gal	4.2 g/L < 0.1 Lb/US Gal	
Total Fats, Oils & Grease (FOG)			15 ppm
Petroleum Hydrocarbons			< 1 ppm
Biochemical Oxygen Demand (5-day BOD)			358 ppm
Chemical Oxygen Demand (COD)			838 ppm
Typical elemental concentrations:			
Chloride		< 1 ppm	
Phosphorous		< 1 ppm	
Sodium		173 ppm	
Potassium		2 ppm	
Silicon		27 ppm	
Sulfur		< 1 ppm	
Boron		22 ppm	

A randomly selected drum sample was analyzed and found to have the above chemical properties. The product is not manufactured to these specifications, therefore slight variations may be expected from batch to batch.

Application Data:

DARACLEAN[®] 235 is suitable for the removal of light to moderate soils from Aluminum, Brass, Bronze, Carbon Steel, Cast Iron, Copper, Hastelloy, Inconel, Stainless Steel, Titanium, and Zinc alloys. Independent laboratory tests have demonstrated excellent corrosion inhibition in sandwich testing and stock-loss testing.

DARACLEAN[®] 235 can be pretreated via skimming and/or filtering prior to disposal. Final sewerability is determined by the municipal sewer district covering the plant location and local regulations.

It is recommended that Daraclean 235 be stored in well-ventilated areas at temperatures between 40 and 100 °F (4 and 38 °C). The recommended shelf life of this product is one year.

Material Performance:

<u>Test</u>	Concentrate	25% Solution	10% Solution
ASTM F-331 Nonvolatile Residue	Conforms	Conforms	Conforms
ASTM F-483 Immersion Corrosion	Conforms	Conforms	Conforms
ASTM F-484 Stress Crazing on Acrylic Plastics	Conforms	Conforms	Conforms
ASTM F-485 Effects on Unpainted Aircraft Surfaces	Conforms	Conforms	Conforms
ASTM F-502 Effects on Painted Aircraft Surfaces	Conforms	Conforms	Conforms
ASTM F-519 Hydrogen Embrittlement, Type 1a	Conforms	Conforms	Conforms
ASTM F-945 Titanium Stress Corrosion	Conforms	Conforms	Conforms
ASTM F-1110 Sandwich Corrosion	Conforms	Conforms	Conforms
ASTM F-1111 Low-Embrittling Cadmium Plate	Conforms	Conforms	Conforms

Film Residue Free Rinsing – No Film Residue

Foam Levels 20 mL 1% Solution in cold tap water 5 mL foam

20 mL 1% Solution in hot tap water Flat, no foam

Typical Applications:

Excellent	***			4									
Good	***			Bronze	<u> </u>		_	,	쥰	Steel			
Fair	••	E	p _s		Steel		Magnesium	Nickel & Superalloys	<u>-</u> ,	S S	٦		
Poor	•	Aluminum	dize	ss &	Carbon Ste & Cast Iron	Copper	seuf	Nickel & Superall	Plating (Cd, Cr,	Stainless	Titanium	0	
Not Recommended		Alur	Ang	Anodized Surfaces	Brass	Car & C	Сор	Maç	Nicl Sup	Plating (Cd, Cr,	Stai	Tita	Zinc
Water-Soluble Oil	s	••••	••••	••••	••••	•••		••••	••••	••••	••••	•••	
Machining Fluids		••••	••••	••••	••••	•••		••••	••••	••••	••••	•••	
Synthetic Coolant	ts	••••	••••	••••	••••	•••		••••	••••	••••	••••	•••	
Medium Weight Oils		••••	••••	***	••••	•••		••••	••••	••••	••••	•••	
Lube Oils		••••	••••	***	••••	•••		••••	••••	••••	••••	•••	
Buffing Compoun	ds	•••	•••	•••	•••	••		•••	•••	•••	•••	••	
Motor Oils		•••	•••	•••	•••	••		***	***	•••	•••	••	
Heavy Petroleum	Oils	•••	•••	•••	•••	••		***	***	•••	•••	••	
Carbonized Soils		•	•	•	•			•	•	•	•		
Railroad & Axle Grease													
Glues													
Spray Adhesives												_	


Typical Usage:

Cleaning Method	Concentration	Temperature	Typical Duration
Immersion, Agitation	5 – 30 %	80 – 180 °F 27 – 82 °C	2 – 30 minutes
Ultrasonic	5 – 30 %	80 – 180 °F 27 – 82 °C	2 – 30 minutes
Spray	1 – 12 % 2 – 5 % Recommended	130 – 180 °F 54 – 82 °C	0.25 – 3 minutes
Steam	1 – 12 %	150 – 200 °F 66 – 93 °C	1 – 5 minutes
Hand Wipe	1 – 100%	Ambient	As required
Corrosion Inhibitor	1 – 3 %	80 – 180 °F 27 – 82 °C	0.25 – 5 minutes

For each application, the concentration, temperature, and duration should be adjusted for optimum performance


Temperature vs. Drying Time DARACLEAN 235

 Drying time is significantly reduced at higher bath temperatures

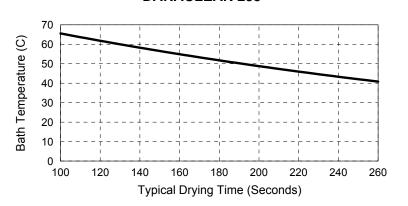


Surface Tension (Tensiometric Method)

 Surface tension is dramatically reduced, increasing surfacewetting and minimizing drag-out.

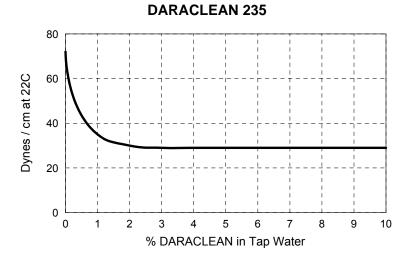

RINSABILITY Rinses to Zero Conductivity


 Complete rinsing of clean surfaces is normally accomplished in two rinse stages.

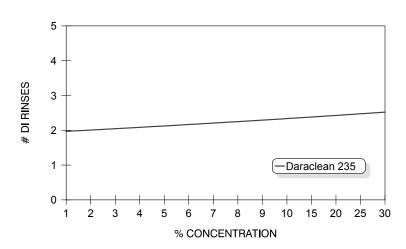

Foaming Properties

Blender Method

 Moderate foam levels are reduced at higher temperatures, and low foam persistence observed.

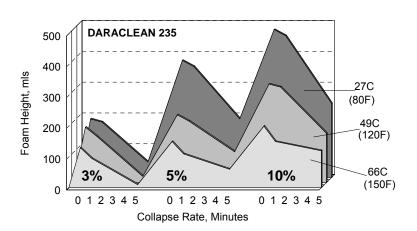

Bath Maintenance Tests:

Concentration Measurement by Titration Kit Method:

Sample Size: 10 mL 10 mL

Indicator:Bromophenol BlueORBromophenol BlueTitrant:0.5N Acid (HCI)1.0N Acid (HCI)Concentration (%):0.5 × drops titrant1.0 × drops titrant

PROCEDURE:

- 1. Using a cup, take about 500 mL cleaning solution from a thoroughly agitated bath.
- 2. Using a graduated cylinder, pipette or syringe, transfer 10 mL (cc) sample to an Erlenmeyer flask.
- 3. Dilute as desired to approximately 50 mL with DI water. (Increased volume will help see the endpoint; the volume is not critical.)
- 4. Add approximately 5 drops indicator; solution will turn blue.
- 5. While swirling, hold the acid titrant bottle exactly vertical and add dropwise to a bright yellow-green endpoint. (If using a pH meter, titrate to pH 3.0.)
- 6. Record the number of drops titrant.
- 7. Calculate: drops acid x factor (depending on the normality of acid titrant used) = % DARACLEAN® 235

Concentration Measurement by Refractometer Method:

% DARACLEAN[®] 235 = Refractometer reading (°Brix) × 6.5 (Solution in DI Water)

Oil Load Measurement:

PROCEDURE:

- 1. Take approximately 500 mL sample from a well agitated tank.
- 2. Transfer 100 ml to a 100 mL graduated cylinder.
- 3. Allow to set 30-60 minutes.
- 4. Record mL oil floating on the top.
 - 3 mL or less = no action required
 - Over 3 mL = skim excess oil from bath

Particulate Load Measurement:

PROCEDURE:

- 1. Using the same sample as for oil load, record mls sediment on the bottom of the cylinder.
 - 2 mL sediment = no action required
 - Over 2 mL = filter sediment from bath

Cleaning Strength by Alkalinity Ratio:

EQUIPMENT:

25 mL pipette 125 mL Erlenmeyer flask or beaker 25 or 50 mL burette (0.1 mL graduations) Magnetic stirrer with Teflon magnet pH meter

REAGENTS:

DI water 0.1 N Acid (HCL) Bromophenol Blue Indicator (if pH meter is not available) Bromothymol Blue Indicator (if pH meter is not available)

PROCEDURE

- 1. Take a 500 mL sample from a well agitated cleaning bath
- 2. Transfer 25 mL sample into a flask or beaker.
- 3. Add deionized water to approximately 50 mL (volume is not critical).
- 4. Titrate with 0.1 N Acid to pH 6.0 (or titrate using Bromothymol Blue indicator to a yellow endpoint if a pH meter is not available).
- 5. Transfer a second 25 mL sample into a fresh flask or beaker.
- 6. Add deionized water to approximately 50 mL.
- 7. Titrate with 0.1 N Acid to pH 3.0 (or titrate using Bromophenol Blue indicator to a yellow endpoint if a pH meter is not available).
- 8. Calculate: Alkalinity Ratio = mL titrant to pH 3.0 (#7 above) ÷ mL titrant to pH 6.0 (#4 above)
 - Theoretical Alkalinity Ratio for DARACLEAN[®] 235 is 1.8
 - If Alkalinity Ratio is 1.8 4.0, add DARACLEAN[®] 235 as required to maintain concentration.
 - If Alkalinity Ratio is greater than 4.0, evaluate the cleaning performance of the bath. If cleaning performance has fallen off, dump and recharge with fresh product

DARACLEAN235 Aerospace Specification Conformance:

ASTM F-331 - Nonvolatile Residue

ASTM F-483 – Immersion Corrosion

ASTM F-484 – Stress Craze of Acrylic Plastics

ASTM F-485 – Unpainted Aircraft Surfaces

ASTM F-502 – Painted Aircraft Surfaces

ASTM F-519 – Hydrogen Embrittlement

ASTM F-945 - Titanium Stress Corrosion

ASTM F-1111 – Corrosion of Low-Embrittling Cadmium Plate

ASTM F-1110 – Sandwich Corrosion

AMS 1526 - Aircraft Exterior Surfaces *

ARP 1511 - Corrosion of Low-Embrittling Cadmium Plate

ARP 1512 – Sandwich Corrosion

ARP 1755 - Stock Loss

Boeing BAC 5763 - Emulsion Aqueous Cleaning

Boeing BAC 5763 – PSD 9-10 – Oxygen Systems

Boeing D6-48809 - Sandwich Corrosion

Douglas CSD #1 – General Purpose Cleaners

SCAQMD Clean Air Certification

DARACLEAN[®] 235 conforms to many other aerospace, automotive, and industrial cleaning specifications. For conformance to specifications not listed here, please contact us via our website at www.qnde.ca.

^{*} Some restrictions apply

Ordering Information:

DARACLEAN® 235 is available in 5 gallon pails and 55 gallon drums:

<u>P/N</u>	Description	<u>Weight</u>
01-6050-40	DARACLEAN® 235, 5 US Gallons (18.9 liters)	43 Lb (19.5 kg)
01-6050-45	DARACLEAN® 235, 55 US Gallons (189.3 liters)	4 Lb (213 kg)

DARACLEAN[®] 235, 5 Gallon Pail

NSN # 6850-01-406-6937

NSN # 6850-01-406-6938

Daraclean® Brand Aqueous Cleaners are manufactured by Magnaflux®, a division of Illinois Tool Works Inc. and distributed through local distributors around the world. For more information or to find a local distributor near you, please visit our website at www.qnde.ca.

The information contained herein is based on our best knowledge, and is believed to be true and accurate. Please read all statements, recommendations, and suggestions contained herein in conjunction with MAGNAFLUX® conditions of sale, which apply to all goods supplied. MAGNAFLUX® assumes no responsibility for the use of these statements, recommendations, or suggestions, nor do we intend them as a recommendation for any use which would infringe any patent or copyright. We reserve the right to change specifications without prior notice or obligation



A Division of Illinois Tool Works Inc.

DISTRIBUÉ PAR / DISTRIBUTED BY:



QUEBEC 164, St-Jean-Baptiste

ONTARIO 275 Sheldon Drive, Unit 3 Mercier, QC J6R 2C2 Cambridge, ON N1T 1A3

www.ande.ca



How to Measure Daraclean Concentration by Burette Titration

- 1. Use the How to Determine Titration Factor instructions to determine the titration factor for your cleaning solution.
- 2. Thoroughly agitate in-use cleaning bath, then take about 100 mL of cleaning solution.
- 3. Use a graduated cylinder, pipette, or syringe to measure 10 mL of cleaning solution.
- **4.** Transfer cleaning solution sample to an Erlenmeyer flask and add 40 mL DI water to make a 50 mL sample. (Increased volume will help see the endpoint; exact volume is not critical.)
- **5.** Add 5 drops of phenolphthalein (or other indicator) to sample and swirl to mix. Solution will turn pink (or other color depending on the indicator used).
- **6.** While swirling, slowly add 0.5N HCl (or other 0.5N titrant) drop-by-drop to the sample until the solution turns clear (or other end-point color depending on the indicator used). Record the mL of titrant to reach the end-point.
- **7.** Calculate cleaning solution concentration by:

mL of titrant to reach end-point × Titrant normality × Titration factor = % Cleaning solution

How to Determine Titration Factor

- 1. Prepare 100 mL of fresh 5% cleaning solution and 10% cleaning solution.
- 2. Use a graduated cylinder, pipette, or syringe to measure 10 mL of each prepared cleaning solution (5% and 10%).
- 3. Transfer each cleaning solution sample to an Erlenmeyer flask and add 40 mL DI water to each flask to make two 50 mL samples. (Increased volume will help see the endpoint.)
- **4.** Add 5 drops of phenolphthalein (or other indicator) to each sample (5% and 10%) and swirl to mix. Solution will turn pink (or other color depending on the indicator used).
- 5. While swirling, slowly add 0.5N HCl (or other 0.5N titrant) drop-by-drop to the 5% sample until the solution turns clear (or other end-point color depending on the indicator used). Count and record the number of drops or mL of titrant added to reach the end-point. Repeat for 10% sample.
- **6.** Calculate factor by:

Example:
$$\frac{5\%}{8 \text{ drops}} = 0.625$$

if titrating with acid other than 0.5N:

The titration factors for 5% and 10% samples should calculate out to be the same.



How to Measure Daraclean Concentration by HACH Alkalinity Titration Kit

- 1. Thoroughly agitate in-use cleaning bath, then take about 100 mL of cleaning solution.
- 2. Fill the kit's measuring tube to the top with cleaning solution.
- 3. Transfer cleaning solution sample into the mixing bottle.
- **4.** Add one packet of Bromcresol Green-Methyl Red indicator powder to the mixing bottle and swirl to dissolve. Solution will turn blue-green.
- **5.** While swirling, slowly add Sulfuric Acid titrant solution drop-by-drop to the sample until the solution turns pink. Count how many drops are added to turn the solution pink.
- **6.** Calculate cleaning solution concentration by:

Number of drops of titrant to reach end-point × Titration factor = % Cleaning solution

Product	Titration Kit Titration Factor*		
Daraclean 121	6.3		
Daraclean 200	1.15		
Daraclean 212	0.7		
Daraclean 232	1.8		
Daraclean 235	2.15		
Daraclean 236	2.5		
Daraclean 238	0.8		
Daraclean 257	1.0		
Daraclean 259	0.65		
Daraclean 282	1.7		
Daraclean 282GF	1.43		
Daraclean 283	1.66		
LC5	0.08		
Magnavu Dip	1.4		
Magnavu Spray	1.4		
615	0.71		

^{*} Titration factors in this table apply only to titrations performed with the HACH Alkalinity Titration Kit.

Alkalinity Titration Kit Ordering Information

Description: Alkalinity Test Kit, Model AL-TA

Product #: 2314500

Manufacturer: Hach Company

DISTRIBUÉ PAR / DISTRIBUTED BY:

QUEBEC 164, St-Jean-Baptiste Mercier, QC J6R 2C2 T:(450) 691-9090 ONTARIO 275 Sheldon Drive, Unit 3 Cambridge, ON N1T 1A3 T: (519) 894-9069

www.qnde.ca