


# MAGNAFLUX MODULAR BLACK LIGHT MOUNTING SYSTEM

## Modular Black Light Mounting System

Allows you to position your Magnaflux hand-held Black Light over the desired inspection surface easily and efficiently!

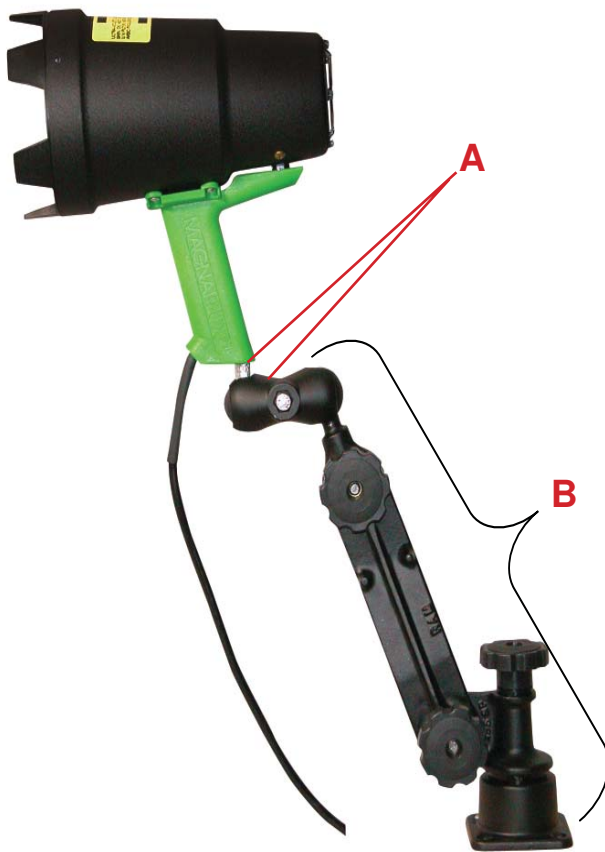

C



D



E

- A** The Handle Adapter (P/N 622595) attaches our standard Black Lights (ZB-100, ZB-100F, ZB-150F-SB) to the other Modular Black Light Fixtures we have available. No need for special tools or drilling necessary.
- B** The Ratchet Base Mount (P/N 622592) was designed to allow the positioning of your Black Light to virtually any flat surface.
- C** Unit Adapter Clamp Assembly (P/N 622372) This fixture combined with the Ratchet Base Mount (Figure B) can be easily attached to either the back or the front lip of our wet bench units. Black Light can be slid and locked to any desired position along the wet bench unit.
- D** Flat Base Mount (P/N 622593) allows the hand held Black Light to be mounted from the ceiling or any other flat surface.
- E** The extension components are used when the Black Light needs to be closer to the inspection. 5-1/2" Extension (P/N 622596) and 7-1/2" Extension (P/N 622597)

*Patent Pending*

DISTRIBUÉ PAR / DISTRIBUTED BY:

**QNDÉ**  
QUALITY NDE LTD

**QUEBEC**

164, St-Jean-Baptiste  
Mercier, QC J6R 2C2  
450-691-9090  
info@qn timer.ca

**ONTARIO**

275, Sheldon Drive, Unit 3  
Cambridge, ON N1T 1A3  
519-894-9069  
nadams@qn timer.ca

**ALBERTA**

7307, 50 street NW  
Edmonton, AB T6B 2J9  
587-689-0811  
ifields@qn timer.ca

[www.qn timer.ca](http://www.qn timer.ca)

1-800-361-3630

# BLACK LIGHT ACCESSORIES

## WET BENCH MOUNT INSTALLATION INSTRUCTIONS (P/N 623365)




1. Remove screws from front plate of Clamp Assembly



2. Remove front plate of Clamp Assembly



3. Place back of Clamp Assembly to inside of bench rail. Place front plate on outside.(see next instruction)

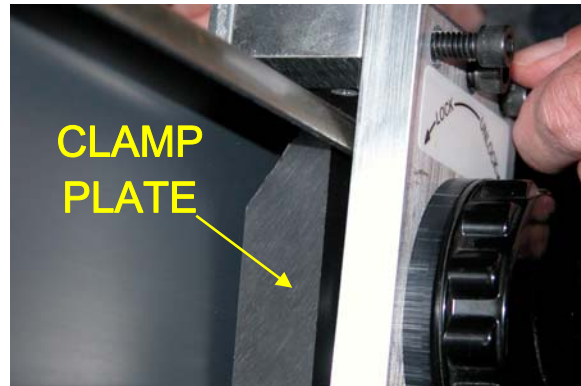

### IMPORTANT ...

Be sure that you place the Clamp Plate under the lip. You may increase opening by turning knob to "UNLOCK"



4. Insert and tighten screws into Clamp Assembly



5. Turn locking knob to "LOCK" direction to permanently attach to bench

DISTRIBUÉ PAR / DISTRIBUTED BY:

**QNDE**  
QUALITY NDE LTD

#### QUEBEC

164, St-Jean-Baptiste  
Mercier, QC J6R 2C2  
450-691-9090  
info@qn.de.ca



#### ONTARIO

275, Sheldon Drive, Unit 3  
Cambridge, ON N1T 1A3  
519-894-9069  
nadams@qn.de.ca

#### ALBERTA

7307, 50 street NW  
Edmonton, AB T6B 2J9  
587-689-6811  
lfields@qn.de.ca

[www.qn.de.ca](http://www.qn.de.ca)

1-800-361-3630